

Datalogic Cobalto – Stand By Timeout

I lettori Cobalto sono programmati per entrare in modalità stand By dopo cinque minuti di inattività.

Per modificare tale parametro stampare le pagine seguenti e leggere i barcode nel seguente ordine:

- Enter/Exit Programming mode
- Leggere il barcode relativo al tempo di timeout desiderato (leggere Disabled per disabilitare lo stand by)
- Enter/Exit Programming mode

Timeout: Enter Standby State

Specifies the standby timeout in minutes.

Upon having been in Low Power state (see [page 61](#)) for this period of time, the scanner will enter a Standby state where the laser and motor are turned off and the scanner is not able to decode a label.



NOTE

When this feature is set as Disabled, the scanner will never enter this state.

The standby timer starts only after the low power timeout has elapsed.





If you wish the scanner motor and laser to completely power off after 10 minutes, you must be sure that the timeout periods for low power and standby total 10 minutes.


To exit this state, press the button on the top of the scanner.



NOTE

If the feature [Touch Button Option](#) has been set to "Disabled," the button will not trigger single line scanning and the *scanner will never enter low power state and standby state.*

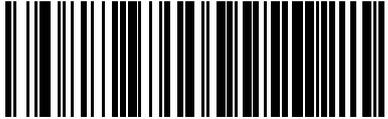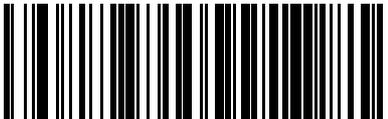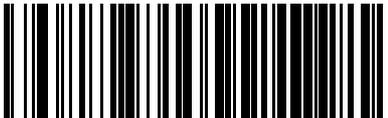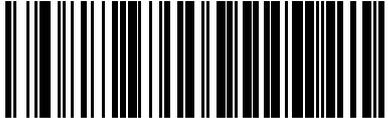
| | |
|--|---|
| |  Enter Standby Timeout = Disabled |
|  Enter Standby Timeout = 1 Minute | |
| |  Enter Standby Timeout = 2 Minutes |
|  Enter Standby Timeout = 3 Minutes | |
|  |  Enter Standby Timeout = 5 Minutes |

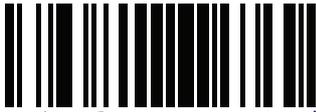


Enter/Exit Programming Mode

Timeout: Enter Standby State


Timeout: Enter Standby State — continued

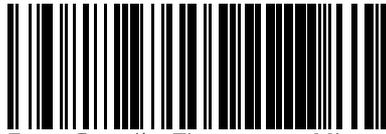


Enter Standby Timeout = 7 Minutes

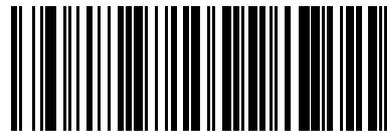


Enter Standby Timeout = 10 Minutes

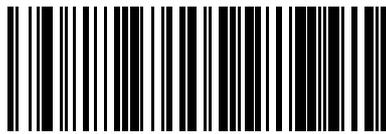


Enter Standby Timeout = 15 Minutes

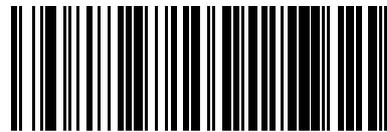


Enter Standby Timeout = 20 Minutes

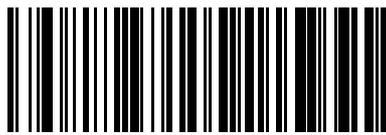

Enter Standby Timeout = 30 Minutes

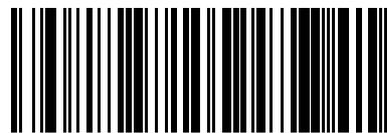

Enter Standby Timeout = 60 Minutes

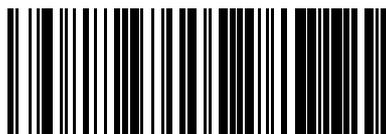

Enter Standby Timeout = 90 Minutes